

# ACCESSORIES



**DT20676-QZ**  
Chainsaw chain (30 cm) for **DCM565**



**DT20665-QZ**  
Chainsaw chain and bar (30 cm) for **DCM565**



**DT20687-QZ**  
45 CM CHAINSAW BAR FOR **DCMCS574**



**DT20688-QZ,**  
45 CM CHAINSAW CHAIN FOR **DCMCS574**



**DT20689-QZ**  
50 CM CHAINSAW BAR FOR **DCMCS575**



**DT20690-QZ**  
50 CM CHAINSAW CHAIN FOR **DCMCS575**



**DT20653-QZ**  
Brushcutter TRI-blade (255 mm) for **DCM571**



**DT20654-QZ**  
Brushcutter straight blade (230 mm) for **DCM571**



**DT20655-QZ**  
Brushcutter 4T blade (230 mm) for **DCM571**