




# Smart, simple, sustainable

The New Digistat

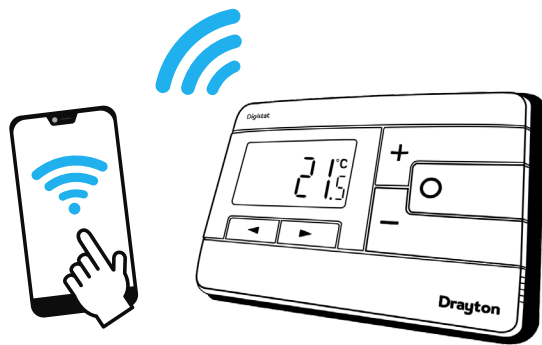

## User guide

Set-up and control

**Drayton**

by **Schneider** Electric

Digistat System ..... 3

Controlling the Digistat using the Wiser Home app ..... 4

Download the Wiser Home app to your smartphone ..... 5

Setting up the app ..... 6

Pairing the app with your Digistat and create your account ..... 7

Control your heating ..... 8-10

Using Away Mode ..... 11

Using Smart Modes ..... 12

Using the Digistat without the app ..... 13

The essentials ..... 14

The display in more detail ..... 15

The settings menu ..... 16

User Settings, options and defaults ..... 17




Advanced User Settings, options and defaults ..... 18

Understanding schedules ..... 19

Understanding preset schedules ..... 20

Customising your schedule ..... 21

Boosting your heating ..... 22

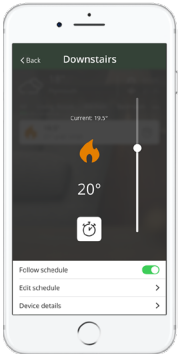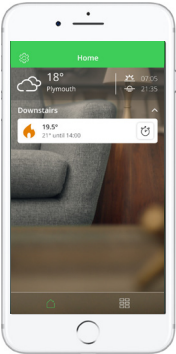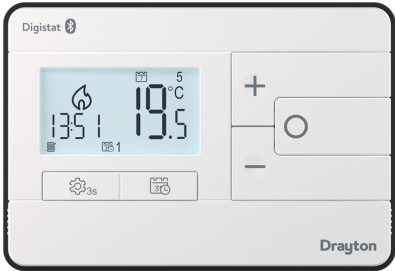

## Using the new Drayton Digistat

Drayton's latest generation of wired and wireless Digistat Thermostats bridges the gap between traditional thermostats and smart systems

Providing unparalleled flexibility and the ultimate in control for the homeowner via the app

You can control your heating directly from the Digistat itself using the 5 buttons and the backlit display

Or if you prefer you can connect your smart phone to the Digistat using Bluetooth and control everything for the palm of your hand




Of course using your Digistat is so much easier if you use your smartphone

With the free smartphone app you can adjust schedules, boost your heating, set a holiday period and set away mode, all from your smartphone in the palm of your hand

With the app downloaded your smartphone connects directly to your Digistat using the phone's Bluetooth technology with no need for Wi-Fi, internet broadband or cloud connectivity. It's just a simple way to use your Digistat from anywhere in the home (typical Bluetooth range)

.....  
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Schneider Electric is under license. Other trademarks and trade names are those of their respective owners.

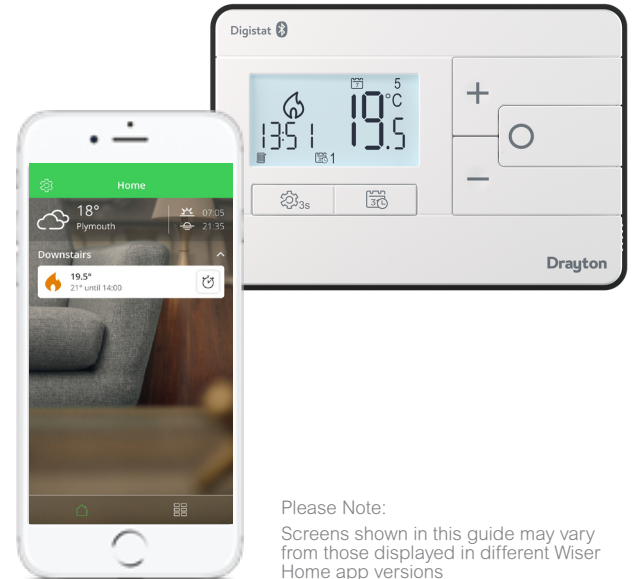

Please Note:  
Screens shown in this guide may vary from those displayed in different Wiser Home app versions

## Step 1: Download the Wiser Home app

Download the Wiser Home app for your mobile device from the App Store® or Google Play™



- ➔ Search for Wiser Home
- ➔ Download the Wiser Home app

The Wiser Home app guides you through the whole set-up process

---



### System requirements

The Wiser Home app is available for Apple® iOS and Android™ mobile devices. Due to the large number of mobile devices available on the market, compatibility cannot be guaranteed with every model. The mobile device must fulfil the following minimum technical requirements:

- Android™ Version 9 or higher
- Apple® iOS 12 or higher
- Bluetooth version 4.2 or higher




## Step 2: Open Wiser Home app

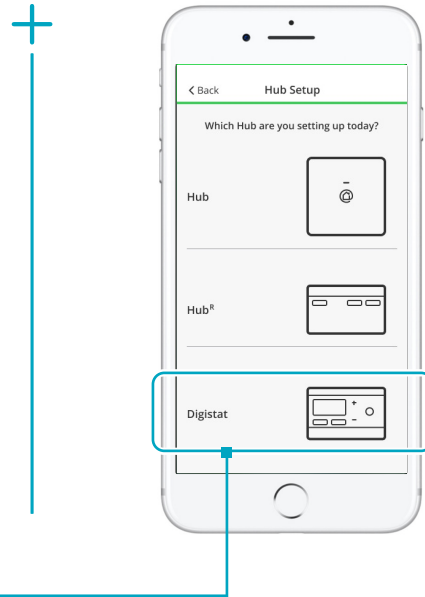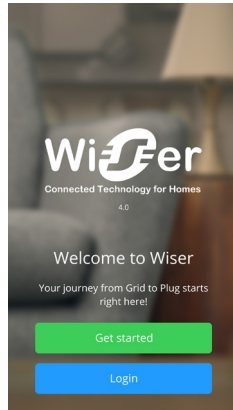


- ➡ On the welcome screen select "Get Started"
- ➡ Then select Digistat

## Pairing

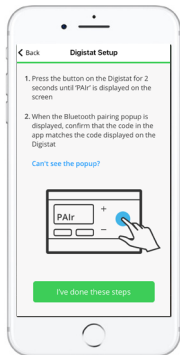



## Confirming

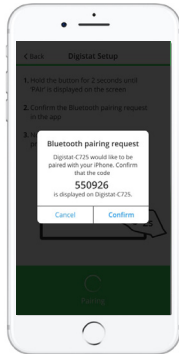

## Renaming



## Account creation

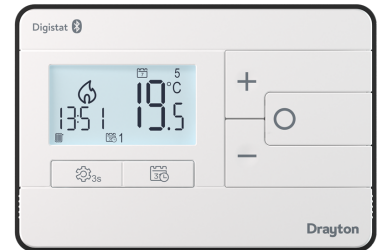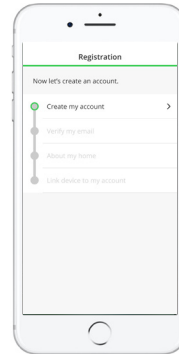


Just follow the instructions in the app...




You're done!  
Now start playing  
with your Digistat.....



Home screen

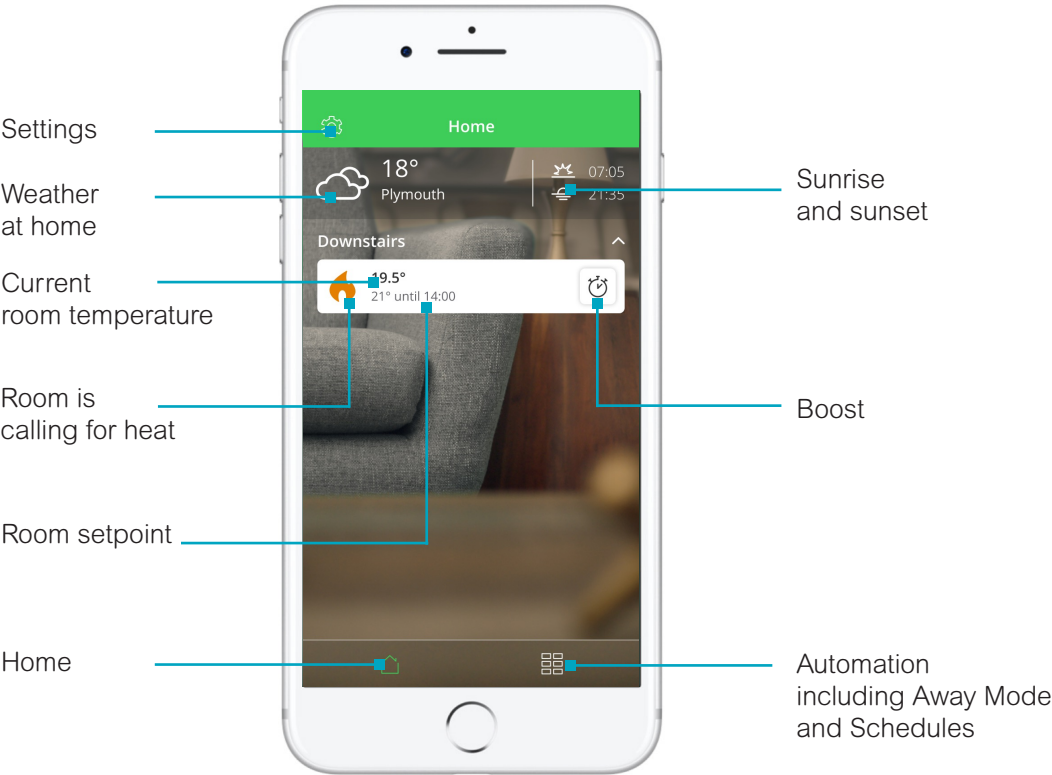

## Room View

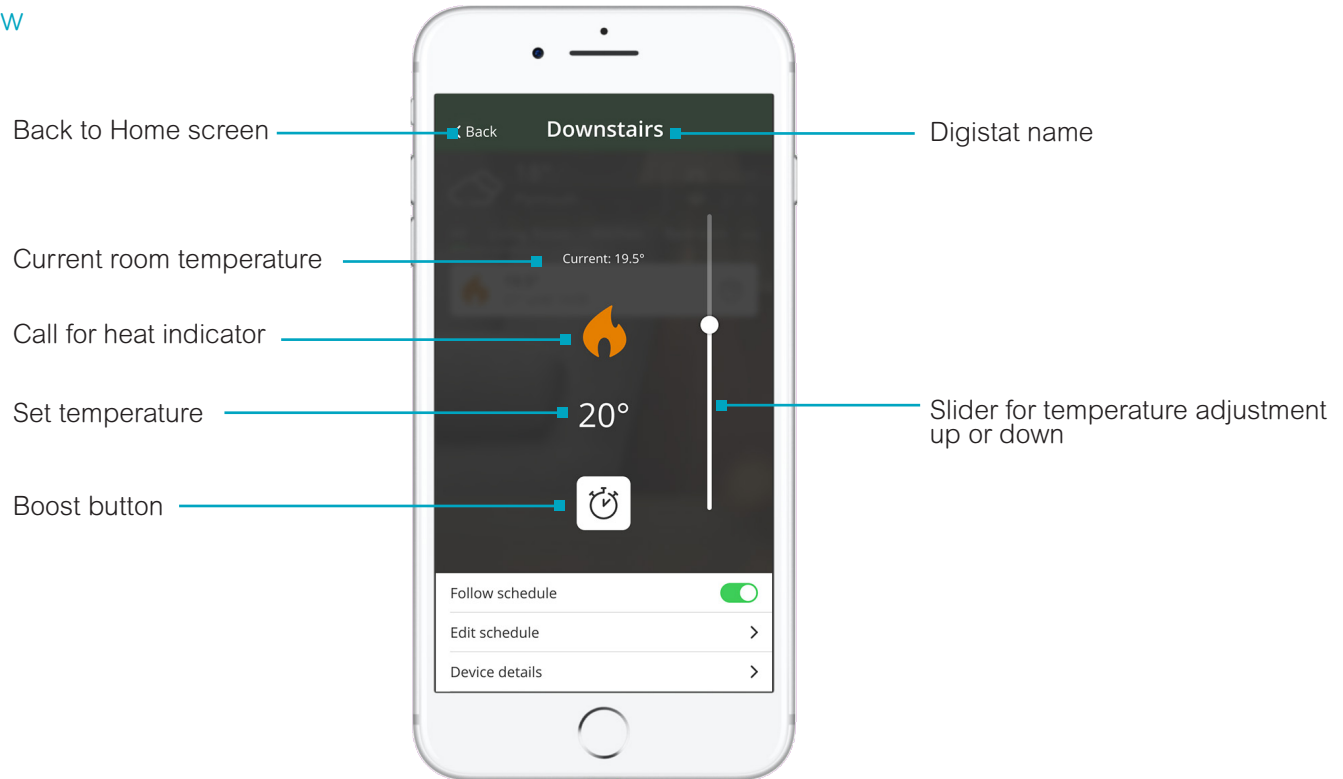

The Schedule Screen

Back to Home

Day being viewed

Time and temperature events

Copy the schedule to other days

The image shows two smartphone screens side-by-side, demonstrating the Digistat heating control app. The left screen displays the 'Upstairs' schedule for Monday (M). It lists four temperature events: 20° from 06:00-08:30, 15° from 08:30-16:30, 20° from 16:30-22:30, and 15° starting at 22:30. A 'Back' button is at the top left, and a 'Copy' icon is at the bottom right. The right screen shows the 'Edit Event' dialog for the 15° event. It has two sections: 'TEMPERATURE' with a slider set to 19, and 'WHEN' with a time picker set to 06:30. At the bottom are 'Cancel', 'Delete', and 'Set' buttons. Blue lines connect text labels to specific UI elements on both screens.


| Day | Time          | Temperature |
|-----|---------------|-------------|
| M   | 06:00 - 08:30 | 20°         |
| M   | 08:30 - 16:30 | 15°         |
| M   | 16:30 - 22:30 | 20°         |
| M   | 22:30 -       | 15°         |

| Section     | Value |
|-------------|-------|
| TEMPERATURE | 19    |
| WHEN        | 06:30 |

Adjust the temperature

Set the start time

Confirm

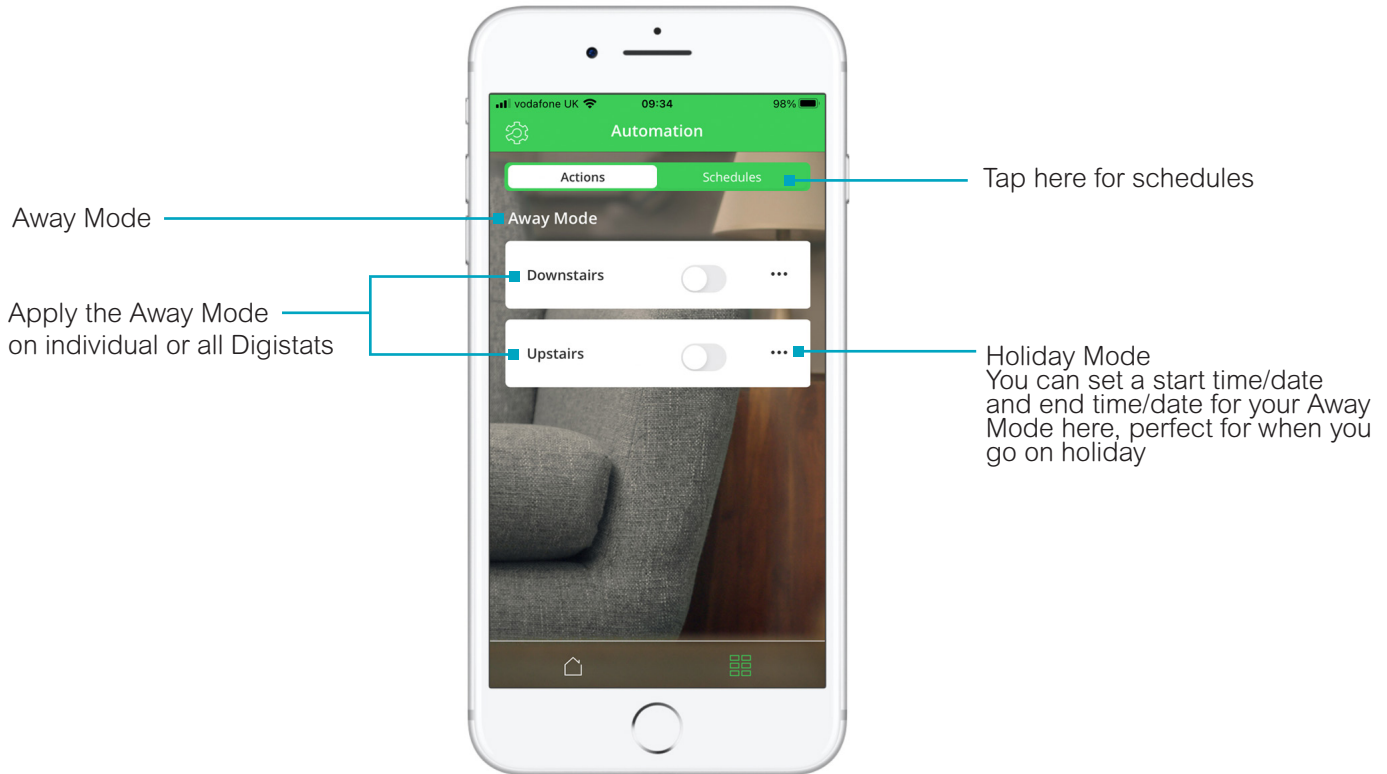

Away Mode appears in the Automation menu


### Smart modes help to save you money or to improve comfort levels

#### Delayed Start

When activated Delayed Start will save you money by delaying start times, effectively adapting your schedule to optimise energy usage based on a learning mode that takes into account the thermal characteristics of your home and the weather forecast

#### Optimum Start


When activated Optimum Start will improve comfort on colder days when the home takes longer to heat up. This is a learning mode which takes into account the thermal characteristics of your home and the weather forecast, and it will turn on your heating earlier to ensure that the set temperature is achieved by the required time in the schedule

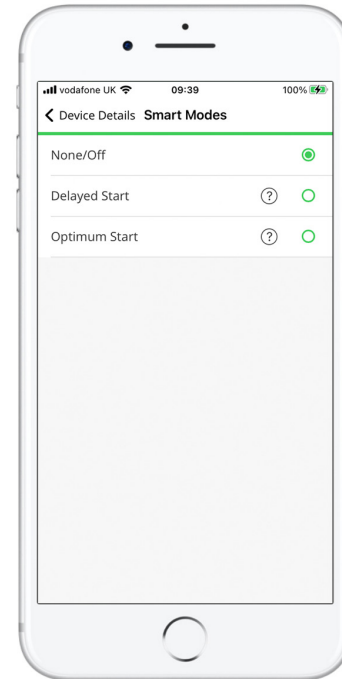


### The new Digistat can also be used without the app

The next pages explain how you set up the Digistat according to your lifestyle and how you make day-to-day changes such as applying a BOOST or setting Holiday Mode



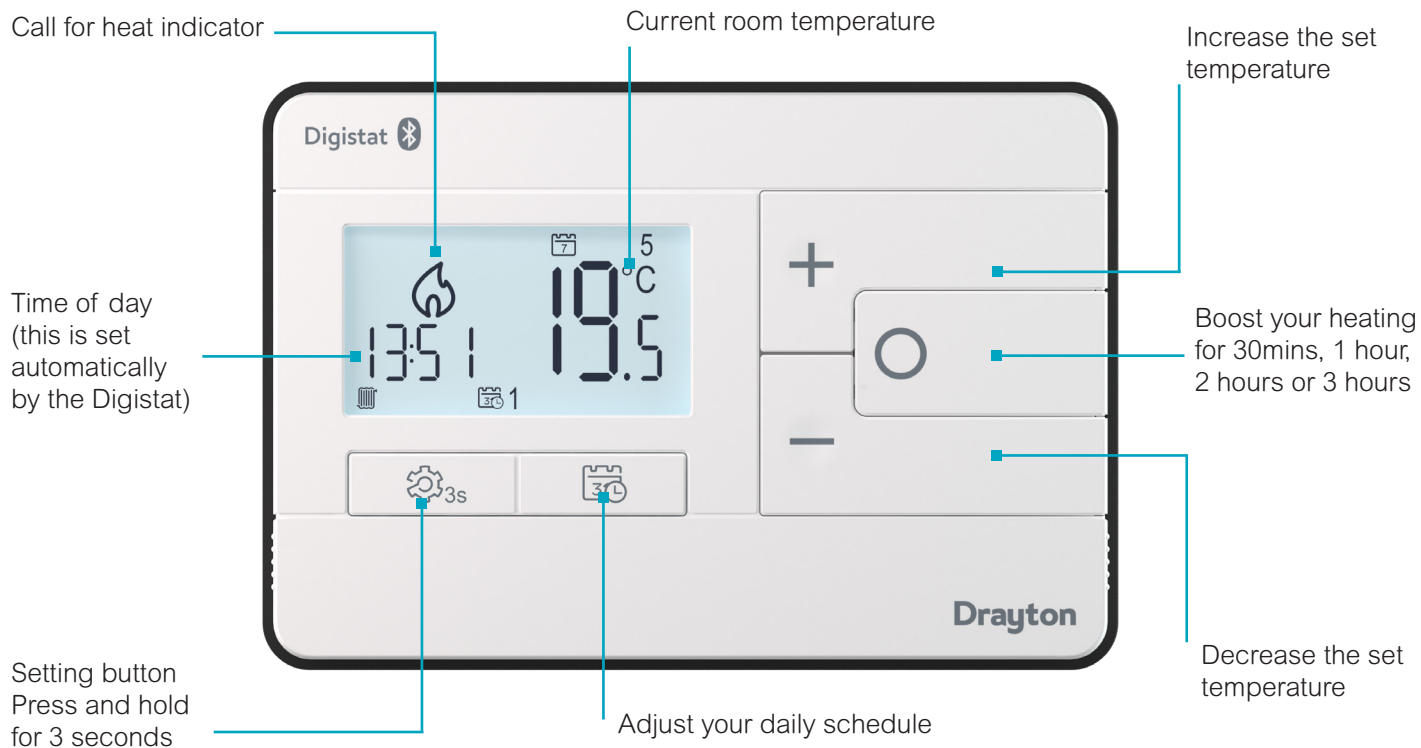

+ Note: pressing any button turns on the display backlight

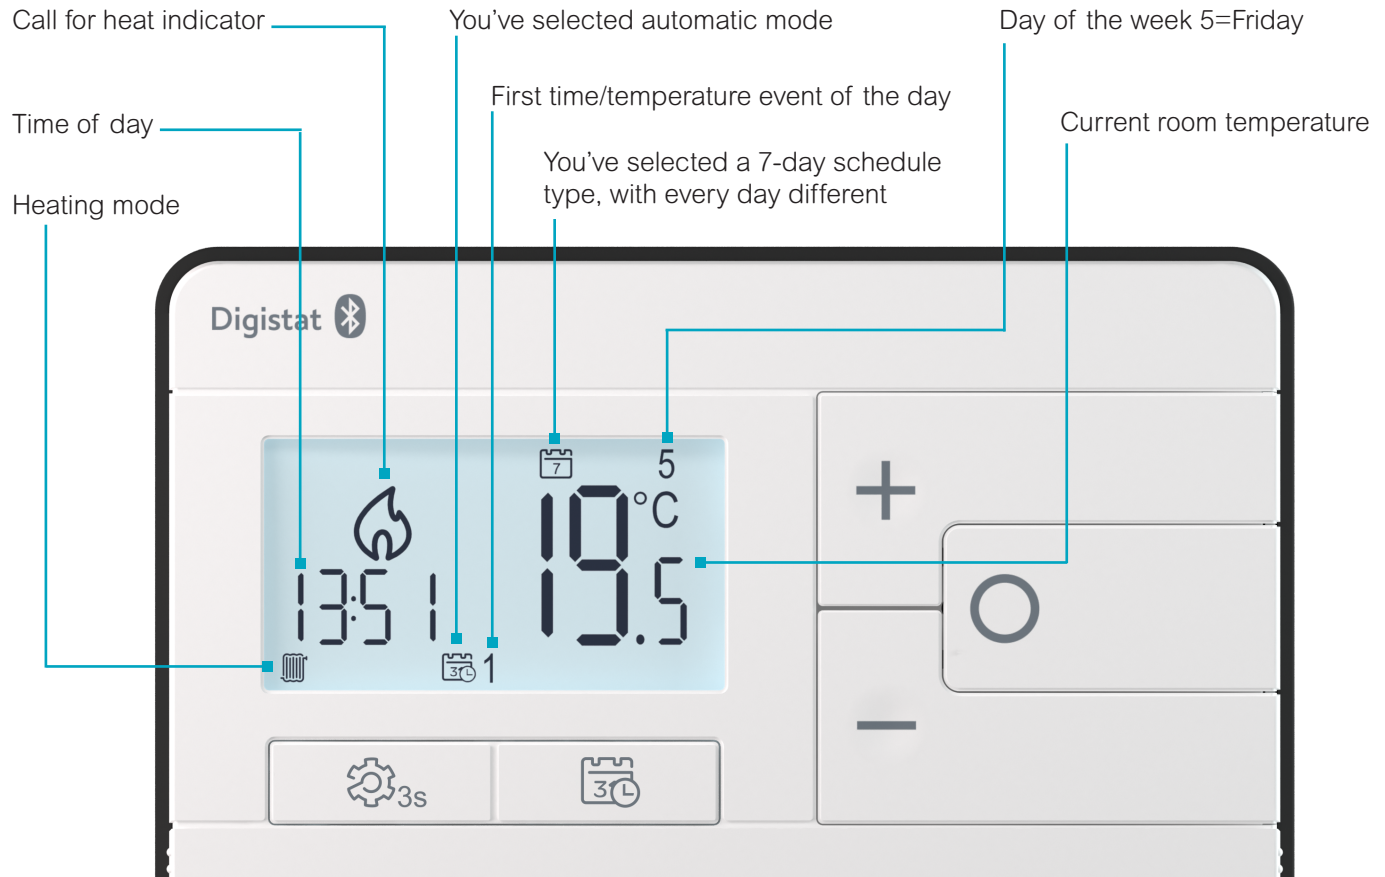

Before you start it's worth checking that the Digistat has been correctly set for your specific needs

**Use these setting to adjust:**


## User settings (USEr 01 menu):

- Change from automatic to manual mode, or turn the thermostat OFF
- Set a holiday period (turn OFF the thermostat for a set period)

## Advanced user settings (AdvU 02 menu):

- Set the time of day
- Set the date
- Choose a 12-hour or 24-hour clock
- Switch OFF daylight saving time
- Apply a temperature offset
- Lock the display
- Set the backlight ON time
- Choose between a 7-day, 5/2-day, 24hour or manual schedule
- Choose between 3 preset schedules
- Return to factory settings

In this menu you will also find the Installer Menu (InSt 03) and the Service Interval menu (Ser 04) but these should only be adjusted by the installer

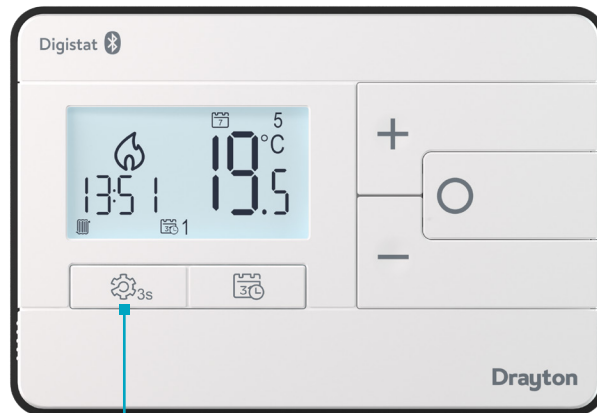

## Settings button

- ➡ Press and hold for 3 seconds to access
- ➡ Then use the + and – buttons to navigate  
And the O button to confirm any new settings
- ➡ In the mode the Settings button can be used as a back button to exit

| USEr 01 Menu          | Options                                   | Default                  | Note                                             |
|-----------------------|-------------------------------------------|--------------------------|--------------------------------------------------|
| Mode                  | Automatic (AUTO),<br>Manual (MAn)         | Automatic (AUTO)         | Automatic mode<br>applies the set<br>schedule    |
|                       |                                           |                          | Manual mode provides<br>temperature control only |
| Holiday Mode<br>(HOL) | Set the start date<br>and time            | Today's date<br>and time |                                                  |
|                       | Set the end date<br>and time              | In 7 days time           |                                                  |
|                       | Set the temperature while<br>you are away | 10°C                     |                                                  |

| AdvU 02 Menu              | Menu item name | Options                                                                                        | Default                                   | Note                       |
|---------------------------|----------------|------------------------------------------------------------------------------------------------|-------------------------------------------|----------------------------|
| Time of day               | tIME 01        | Set or adjust the time of day                                                                  | Automatically factory-set by the Digistat |                            |
| Date                      | dAtE 02        | Set or adjust the date                                                                         | Automatically factory-set by the Digistat |                            |
| Clock format              | 12:24 03       | 12-hour or 24-hour clock display                                                               | 12-hour clock                             |                            |
| Daylight saving time      | dSt 04         | ON or OFF                                                                                      | ON                                        |                            |
| Temperature Offset        | OSet 05        | -5° to +5°C in 0.1°C increments                                                                | 0.0°C                                     |                            |
| Display Lock              | LOC 06         | ON or OFF                                                                                      | ON                                        | Set a 3-digit code to lock |
| Backlight ON time         | bALt 07        | OFF, 10secs, 20 secs                                                                           | 10 secs                                   |                            |
| Schedule Type             | ProG 08        | 7 day, 5/2 day, 24 hour, none                                                                  | 7 day                                     |                            |
| Preset schedule           | PSEt 09        | 1 (heating morning and evening), 2 (heating morning, noon, and evening) or 3 (heating all day) | 1                                         |                            |
| Reset to factory settings | rPSt 12        | Yes or No                                                                                      | No                                        |                            |

| Schedule Types | Select in Advanced User settings, item Prog 08                                                                                                 |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| 7 day          | Every day can be programmed differently -<br>This is great if you have a very flexible lifestyle                                               |
| 5/2 day        | Weekdays all the same but weekend programmed differently -<br>This schedule is ideal if your work days are the same every day                  |
| 24 hour        | Every day the same -<br>If you work from home or are retired then this schedule will be more suitable                                          |
| None           | The thermostat controls temperature only all the time -<br>Use this setting if you want to keep your home at the same temperature at all times |

| Preset 1 |  | All day |        | 5/2 day  |        |         |        |
|----------|--|---------|--------|----------|--------|---------|--------|
| Event    |  | Time    | Temp   | Weekdays |        | Weekend |        |
| 1        |  | 06:30   | 20.0°C | 06:30    | 20.0°C | 07:00   | 20.0°C |
| 2        |  | 08:30   | 16.0°C | 08:30    | 16.0°C | 09:00   | 18.0°C |
| 3        |  | 16:30   | 21.0°C | 16:30    | 21.0°C | 16:00   | 21.0°C |
| 4        |  | 22:30   | OFF    | 22:30    | OFF    | 23:00   | OFF    |

| Preset 2 |  | All day |        | 5/2 day  |        |         |        |
|----------|--|---------|--------|----------|--------|---------|--------|
| Event    |  | Time    | Temp   | Weekdays |        | Weekend |        |
| 1        |  | 06:30   | 20.0°C | 06:30    | 20.0°C | 07:00   | 20.0°C |
| 2        |  | 08:30   | 16.0°C | 08:30    | 16.0°C | 09:00   | 18.0°C |
| 3        |  | 12:00   | 21.0°C | 12:00    | 21.0°C | 12:00   | 21.0°C |
| 4        |  | 14:00   | 16.0°C | 14:00    | 16.0°C | 14:00   | 18.0°C |
| 5        |  | 16:30   | 21.0°C | 16:30    | 21.0°C | 16:00   | 21.0°C |
| 6        |  | 22:30   | OFF    | 22:30    | OFF    | 23:00   | OFF    |

 
| Preset 3 |  | All day |        | 5/2 day  |        |         |        |
|----------|--|---------|--------|----------|--------|---------|--------|
| Event    |  | Time    | Temp   | Weekdays |        | Weekend |        |
| 1        |  | 06:30   | 20.0°C | 06:30    | 20.0°C | 07:00   | 20.0°C |
| 2        |  | 22:30   | OFF    | 22:30    | OFF    | 09:00   | 18.0°C |
| 3        |  |         |        |          |        | 16:00   | 21.0°C |
| 4        |  |         |        |          |        | 23:00   | OFF    |

## Setting up Times/Temperatures on the Digistat

1. With the product operating as normal in Auto Mode, press  once. Use + and – to select the day or set of days you want to adjust the times and temperatures for. Press O to confirm.



2. The time on the display will now be flashing as shown, use + and – to adjust the first period start time. Press O to confirm.



3. Once the time has been set the temperature on the display will now be flashing, use + and – to adjust the temperature for the first time period. Press O to confirm.




4. Move to the next time and temperature periods and adjust as needed, confirming the changes by pressing O. The new schedule will be saved pressing O when the word SAVE is flashing.



5. In Pre-set Program 1 you will have 4 time periods available, to add more (max. 8 per day) press + when you see the SAVE option on-screen and time period 5 at the bottom of the screen, to scroll to the Add option. Press O to add time period then adjust time and temperature as required.



6. To exit press  to go back until you return to the home screen.

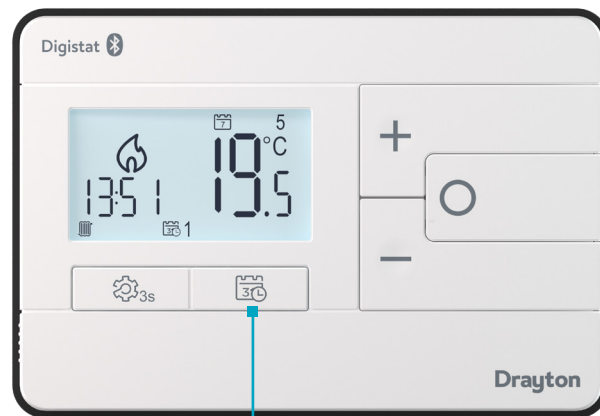

Schedule button


## Setting a BOOST means applying a new set temperature for a short period of time

You can boost for 30 minutes, one hour, two hours or three hours

When the BOOST has expired the normal schedule takes over

After pressing the Boost Button (O) you set the length of time for the boost and then the temperature, adjusting with the + and - buttons confirming each one with O button

The Digistat remembers your last BOOST so if you want to repeat the previous boost you just press O three times

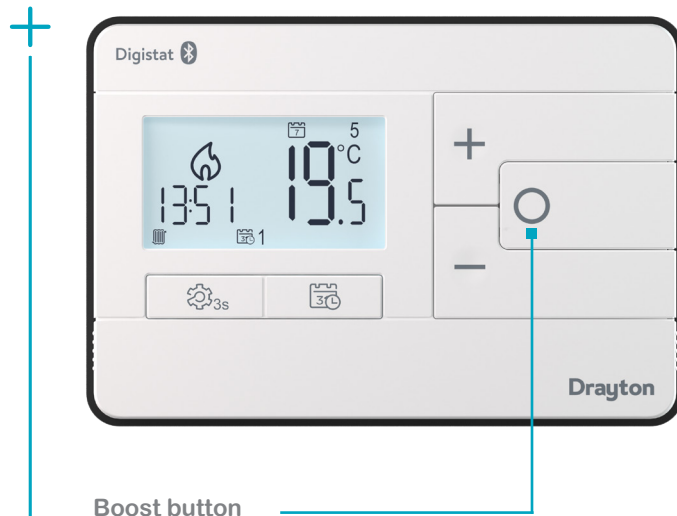

## Trademarks

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Schneider Electric is under license. Other trademarks and trade names are those of their respective owners.

Other brands and registered trademarks are the property of the relevant owner.

Please Note: Information in this guide is subject to change as these products evolve. Screen graphics and descriptions in this guide may not reflect exactly the latest product configuration.

Customer Service Tel: +44 333 6000 622\*

Technical Helpline: +44 333 6000 622\*

\*Please note that international call charges may apply to those calling from outside of the UK.

Website: [wiser.draytoncontrols.co.uk](https://www.wiser.draytoncontrols.co.uk)

E-mail: [customer.care@draytoncontrols.co.uk](mailto:customer.care@draytoncontrols.co.uk)

 @DraytonHome

 /DraytonControls

 /DraytonHome

 /DraytonHome



BRITISH BUILT TO LAST

06490331001 Iss A