



Einhell

EXPERT



Cordless Pruning Shears

GE-LS 18 Li-Solo

Item No.: 3408300

Ident No.: 21032

Bar Code: 4006825652727

The Einhell GE-LS 18 Li-Solo cordless branch shears is a high-performance member of the flexible Power X-Change family. The branch shears is suitable for cutting branches up to 28 millimeters thick. Its high-grade bypass blades are designed for efficient cutting performance. A belt clip lets you carry the cordless branch shears in total comfort even when working high up in the trees. The branch shears comes with a safety switch and an ergonomic handle with Softgrip. Safe storage is assured by an On/Off sliding switch to activate/deactivate the shears and a rugged plastic cover. This product comes without a Power X-Change battery or charger which are available separately.

Features & Benefits

- Member of the Power X-Change family, 1x18V battery necessary
- For powerful cutting of branches with a thickness up to 28 mm
- High-quality bypass blades for efficient cutting work
- Fosters growth thanks to clean and sharp cutting results
- Belt clip for optimum carrying comfort even at higher tree levels
- Safety switch for safety while using the shears
- On/Off sliding switch for activating/deactivating the shears
- Sturdy plastic cover for the blade for safe storage
- Effortless and easy change of blade possible
- Handy operation thanks to the ergonomic handle with soft grip
- Supplied without battery and charger (available separately)



Technical Data

- | | |
|-----------------|-------|
| - Cutting width | 28 mm |
|-----------------|-------|

Logistic Data

- | | |
|--------------------------------------|----------------------|
| - Product weight (kg) | 0.8 |
| - Gross weight (kg) | 1.05 |
| - Dimensions single packaging | 380 x 115 x 70 mm |
| - Pieces per export carton | 8 Pieces |
| - Gross weight of export carton | 9.2 kg |
| - Dimensions export carton | 395 x 300 x 250 mm |
| - Container quantity (20"/40"/40"HC) | 6976 14144 15912 |



Available as special accessories



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



PXC Akku-Wandhalterung
Case
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



5,2Ah & 4A Fastcharger
PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory

Battery-Running-Times



cutting¹
(pieces)

One Battery for All	
1.5 Ah	1070
2.0 Ah	1426
2.5 Ah	1783
3.0 Ah	2139
4.0 Ah	2852
5.2 Ah	3708
6.0 Ah	4278
8.0 Ah	5704

Test setup:
1) wood - round dry beech wood Ø 15 mm