



Einhell

EXPERT

POWER X-CHANGE

Cordless All Purpose Saw

TE-AP 18/13 Li - Solo

Item No.: 4326315

Ident No.: 21013

Bar Code: 4006825678284

The Einhell TE-AP 18/13 Li-Solo cordless all purpose saw is a particularly lightweight, handy saw for flexible use around the home and garden. It is part of the powerful Power X-Change family. Thanks to its low weight and ergonomic design with soft grip, the reciprocating saw can also be operated with one hand. The reciprocating saw works with a 13 mm stroke height and a cutting capacity of up to 50 mm in wood. The power can be precisely adjusted using the rpm speed electronics. The saw blade can be exchanged without tools and the saw shoe can be adjusted using the hexagon socket key which is stored and supplied in the housing. The cordless universal saw is delivered without a battery or charging device.

Features & Benefits

- Member of the Power X-Change family, 1 x 18 V battery required
- Multipurpose: Construction site – Workshop – Garden
- Tool-free blade change for quick use
- Extra compact design for easy handling
- Lightweight, handy design suitable even for one-handed work
- Ergonomic handling with optimum grip thanks to the softgrip
- Including 1x quality saw blade each for wood and metal
- Delivered without battery or charging device (available separately)



Technical Data

- | | |
|-----------------------------|------------------------|
| - Number of strokes | 3000 min ⁻¹ |
| - Stroke height | 13 mm |
| - Cutting depth in wood | 50 mm |
| - Cutting depth in plastic | 10 mm |
| - Cutting depth in steel | 4 mm |
| - Toolless saw blade change | yes |

Logistic Data

- | | |
|--------------------------------------|---------------------|
| - Product weight | 1.13 kg |
| - Gross weight single packaging | 1.73 kg |
| - Dimensions single packaging | 414 x 81 x 159 mm |
| - Pieces per export carton | 6 Pieces |
| - Gross weight export carton | 10.66 kg |
| - Dimensions export carton | 490 x 430 x 185 mm |
| - Container quantity (20"/40"/40"HC) | 4308 8760 10200 |



Available as special accessories



Sä-Sägebl.Set 3tg Ho/Met Akku
Universalsägen-Zubehör
Item No.: 49576105
Bar Code: 4009315761053
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



E-Case L with wheels
System Carrying Case
Item No.: 4540014
Bar Code: 4006825660562
Einhell Accessory



E-Case S-F
System Carrying Case
Item No.: 4540011
Bar Code: 4006825653991
Einhell Accessory



E-Case M
System Carrying Case
Item No.: 4540021
Bar Code: 4006825667721
Einhell Accessory

Battery-Running-Times

One Battery for All


sawing¹
(pieces)

One Battery for All	sawing ¹ (pieces)
1.5 Ah	185
2.0 Ah	242
2.5 Ah	313
3.0 Ah	369
4.0 Ah	484
5.2 Ah	629
6.0 Ah	726
8.0 Ah	976

Test setup:

1) softwood - round soft wood Ø 35 mm