

SPECIFICATION:

ELECTRICAL: 45W; C220-240v;50HZ

UNIT SIZE: 320 X 500 X 85MM




Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

 **HEATSTORE**

Telephone: **0117 923 5375** Fax: **0117 923 5374**
Victoria Road, Avonmouth, Bristol BS11 9DB
www.heatstore.co.uk

HSTR45W - Towel Rail

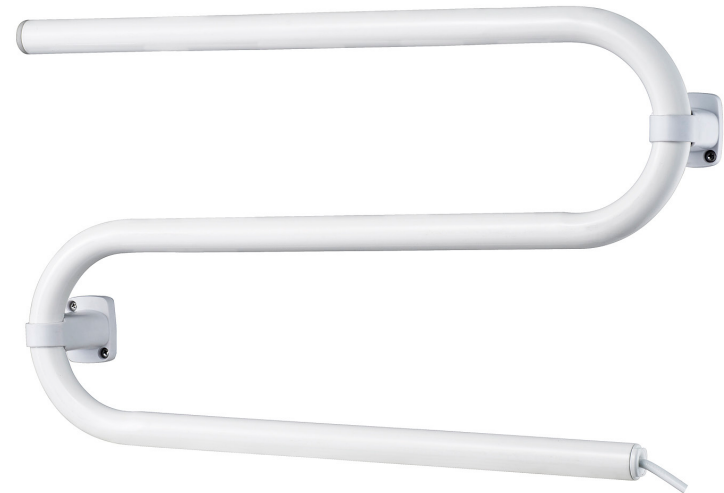

IMPORTANT SAFEGUARDS

WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

IF IN ANY DOUBT ABOUT THE INSTALLATION OR USE OF THIS PRODUCT, CONSULT A COMPETENT ELECTRICIAN.

 **HEATSTORE**

Important Safeguards:

- Read all instructions before using this heater.
- Extreme caution is necessary when towel rail is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or after the heater malfunctions, has been dropped, and/or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment or repair.
- Do not use outdoors.
- Never locate heater where it may fall into a bath or other water containers.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like.
- Arrange cord away from traffic area and where it will not be tripped over.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage the heater.
- Do not use it in area where flammable liquids are present.
- Use this heater only as described in this manual. Any other use not recommended by the manufacture may cause fire, electric shock, or injury to persons.
- Keep these instructions for your reference.

WARNING

This appliance is intended only for drying textiles when washed in water.

The towel and cloth rail is only allowed to be installed at a distance of at least 0.6M from baths and showers.

In order to avoid a hazard for very young children, this appliance should be installed so that the lowest heated rail is at least 600mm above the floor. The towel rail is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

- Any other servicing should be performed by an authorized service representative
- The heater must not be located immediately below a socket-outlet
- In order to avoid a hazard for very young children, this appliance should be installed so that the lowest heated rail is at least 600 mm above the floor.

- The towel rail is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

Caution:

- This heater only operates in upright position
- Store the heater in cool dry location when not in use
- Do not store until the heater has cooled down
-

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.


Wall-Mount Installation Instructions:

Step 1. Mark screw holes on the wall

Step 2. Drill holes in the wall

Step 3. Insert wall plugs supplied into the holes

Step 4. Fix brackets to the wall with screws provided

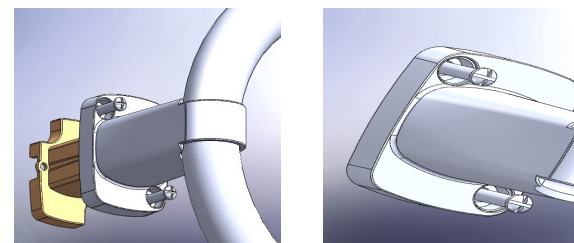

Operating Instructions:

- Please read the wall-mounted installation carefully to understand how to install on your ideal location of the wall.
- Make sure to complete the installation.
- Plug the power cord into an electrical outlet.
- Connect to a suitable power supply 220-240V AC, 50Hz.