

ERTSLEDGT

3 Hour Non-Maintained LED Emergency Light c/w Automatic Self-Test Function

These instructions should be read carefully and retained for further reference and maintenance.

IMPORTANT NOTE:

The luminaire must be installed by a skilled electrician and to the most current electrical wiring and building regulations

This luminaire is NOT suitable to be used with dimmer switches

The luminaire should not be modified, if modified this will invalidate any warranties and Firesafe will not be liable for any damages caused

The person carrying out the installation is to check and verify that the total load on the circuit, including the rating of the cable, fuse and/or circuit breaker is not exceeded

It is the responsibility of the installer to consider any fire risks and breach in any fire protection barriers or partitions, and take the appropriate precautions

Emergency lighting should be installed and maintained in accordance with BS5266 and BS EN50172

INSTALLATION

1. Ensure the mains supply is isolated
2. Remove the fitting from the base by the two retaining clips, insert a flat bade screwdriver to release
3. Secure the base to the wall using appropriate fixings
4. A permanent 230v AC supply is required to the live (L), and neutral (N) terminals
5. Ensure the internal cable clamp on the back plate is used to secure the cable and ensure a gland or grommet is used to maintain the IP rating of the luminaire and that ALL electrical connections are tight with no loose strands
6. Plug the battery lead into the connector on the PCB and re-fit the luminaire toe base ensuring no cables are trapped, and the retaining clips are secure
7. Restore the AC mains supply, the green charge LED should illuminate
8. Allow 24 hours to charge the batteries and record the installation date in the log book
9. After a 24 hour charge period test the luminaire for a full 3 hour duration by removing the 230v AC supply and record the date of the commissioning on the battery pack inside the luminaire and also in the log book
10. Subsequent monitoring of LED status should be carried out and recorded in the log book in accordance with the British/European standards.

Automatic Self-Test Function

The luminaire has an integral automatic self-test function.

When the luminaire is connected to a 230v AC supply the luminaire will perform an automatic test, monthly and annually.

After the first annual test, the test routine will then be scheduled for every 30 days and every 360 day for the monthly and annual tests. The luminaire will retain the testing schedule for approximately 7 days without a 230v AC supply (the internal battery still has to be connected).

Automatic Daily Test

The luminaire checks daily if the battery is connected and that AC mains supply is present, if both are present the GREEN LED will be illuminated. If the battery is not connected or there is an issue with the battery the LED will flash Red once every three seconds. If there is no 230v AC supply present the LED indicator will be extinguished and the luminaire will go in to emergency mode.

Monthly /Annual Test

The luminaire performs an automatic 10 minutes duration self-test every month and an annual test for the full 3 hours duration. During the test the LED will be flashing RED quickly to indicate the fitting is in test for the duration of the test, if the test has been completed and satisfactorily then the LED will return to a constant Green state.

If during the test there is an issue with the light output, then the LED will flash Red twice every three seconds. If fitting does not complete the required emergency duration then the LED will flash Red three times every three seconds.

LED Indicator Status

Green LED On:	AC mains supply and battery connected
LED Off:	No AC supply present
Red Flash once every 3 seconds:	Issue with the battery during the daily test
Red Flash very quickly:	Luminaire in manual/monthly/annual test mode
Red Flash twice every 3 seconds:	Fitting failed test - Issue with the light output during auto-test
Red Flash three every 3 seconds:	Fitting failed test – the battery duration was not achieved during auto-test
Failed Test / Reset:	After a failed test and the fault has been rectified, the test button will need to be pressed for 3 seconds to activate a self-test for 5 minutes or remove the 230v AC supply to reset the fault and LED indicator status back to green.

Maintenance

Repairs should only be carried out by suitably qualified person

Regular cleaning of the luminaire should be carried out at regular intervals not only to ensure good optical performance but also ensure that dirt does not accumulate to such an extent as to impair the electrical or thermal safety of the fitting, this should be done with a soft damp cloth, do not use any chemicals or abrasives.

Servicing should only be carried out after the fitting has been made electrically safe and the battery disconnected

Light Source Maintenance: the light source of this luminaire is not replaceable; in case the light source need to be replaced (e.g. at the end of its life), the whole luminaire shall be replaced

TESTING

Ensure the luminaires are tested in accordance with 5266-8:2004 / BS EN 50172:2004

Daily: Ensure the green charge LED is illuminated

Monthly: Check the LED Indicator Status, if Green then the unit has passed the monthly test. If the LED is flashing 2 or 3 times every 3 seconds then the luminaire has failed and will require an engineer to investigate, record the result in the log book

Annually: Repeat the monthly inspection and record the result in the log book. If the LED is flashing 2 or 3 times every 3 seconds then the luminaire has failed and will require an engineer to investigate.

Defects: Any defects or failures should be noted and recorded in the log book and actioned by a competent person as soon as possible

INSTALLATION / TEST RECORDS		Location:				Part No:			
		Installed By				Date:			
		Comissioned By:				Date:			
MONTH	TEST	FIRST YEAR		SECOND YEAR		THIRD YEAR		FOURTH YEAR	
		Signed	Date	Signed	Date	Signed	Date	Signed	Date
1	Short								
2	Short								
3	Short								
4	Short								
5	Short								
6	Short								
7	Short								
8	Short								
9	Short								
10	Short								
11	Short								
12	Full Duraiton								

Technical Specification:

Voltage:	230v AC 50Hz
Lamp:	2x3pcs SMD LED
Wattage:	3W
Colour Temp:	6000-6500K
Lumen Output	Mains: 250lm
Battery:	3.6V 1800mAh Ni-Cd
Class:	II
Emergency Duration:	3 Hours
Recharge Time:	24 hours
Auto test:	Every month 10 minutes test duration, annually 3 hours test duration
Temp Range:	0°C -40 C
Dimensions:	246mm(L), 132mm(W), 65mm(H)
Weight:	0.60kg
IP:	20

Warranty:

This product is covered by an extended warranty for 3 years from date of purchase. The extended warranty is available following installation in the UK or Ireland by a competent person in accordance with the current building and IEE wiring regulations. For full terms and conditions in regards to our extended warranty please refer to the website.

Environment:

Please DO NOT dispose of electrical items or packaging as unsorted waste, use the recycling facilities provided by your local authorities.

Due to our policy of continuous improvement we reserve the right to change specification without prior notice. Errors and omissions excepted. These instructions have been carefully checked prior to publication. However, no responsibility can be accepted by Firesafe for any misinterpretation of these instructions.

LIGHTSAFE

Distributed by: FIRESAFE
10 Sandersons Way,
Blackpool, FY4 4NB
Email: sales@firesafe.co.uk
Web: www.firesafe.co.uk

