


Odyssey trunking– continued


Method of continuation through a partition wall

Continue the main lateral run of base through the partition wall with short lengths of cover fitted where the trunking passes through the partition. The partition wall trunking is then butted up to the main run and the joint covered by an Internal bend. (as shown below)

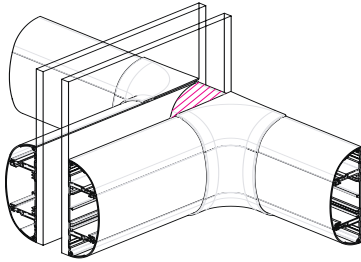

Offset dimensions

The minimum set that can be accommodated in the same plane (from internal to external bend), is shown below.

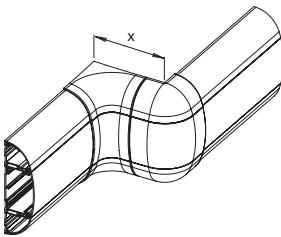

- x =
- Fixed bend offset 138mm
- Adjustable bend offset 165mm
- Adjustable external bend, fixed internal bend offset 163mm
- Adjustable internal bend, fixed external bend offset 140mm


Cable capacities

- All calculations allow for a 45% space factor.

As there can be differences between cable sizes, Marshall-Tufflex recommend that cable dimensions are confirmed with the manufacturing company.

Cable capacity chart	Compartment 1		Compartment 2		Compartment 3	
	No box	With box	No box	With box	No box	With box
PVC power cable 1.5mm ² stranded copper	71	–	226	69	71	–
PVC power cable 2.5mm ² stranded copper	47	–	152	47	47	–
PVC power cable 4.0mm ² stranded copper	34	–	109	33	34	–
Data cable: Ø5.5mm	24	–	76	23	24	–
Data cable: Ø6.0mm	20	–	64	20	20	–
Data cable: Ø6.5mm	18	–	56	17	18	–
Data cable: Ø7.0mm	15	–	47	14	15	–
Data cable: Ø8.4mm	10	–	33	10	10	–

Dimensions

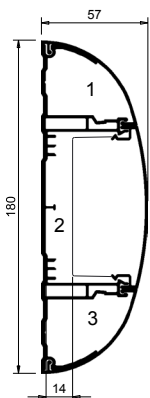

Odyssey trunking – with box
 Compartment 1 & 3 total area = 1278mm²
 Compartment 2 total area = 859mm²

Odyssey trunking – no box
 Compartment 2 total area = 3972mm²